

De-Airing Unit With Manual Pumps

User Manual

Man 097	5.0.1	04/08/2014	C.Spалton	Andy Small	Chris Rasmussen
Manual No.	Revision	Date	Originator	Checked	Authorised for Issue

Contents

Section 1 : General Information	3
Section 2 : Installation Of The De-Airing Unit	4
Section 3 : Preparation And Setting Up	5
Section 4 : Operating And Recharging.....	6
Section 5 : Calculation Of De-Airing Pressures For Piezometers.....	7
Section 6 : Calculating De-Airing Water Volumes	10
Section 7 : The De-Aired Water Boiler	11
Figure 1 De-Airing Unit - Schematic	12
Figure 2 De-Aired Water Boiler	13

Section 1 : General Information

Refer to Figure 1

The de-airing unit consists essentially of pressure, supply and return tanks (A, B and C) and gauges to measure water pressure and vacuum during circulation of de-aired water through Hydraulic Piezometers. These components are mounted on a frame complete with valves and connecting pipe work. Foot pressure and vacuum pumps are used to operate the equipment. Pressure is applied to the de-aired water in supply tank B by forcing water from the pressure tank A into the bladder in B. Water from the supply tank is then circulated through the piezometer tubes back to the return tank C. The volume changes measured in both the pressure and return tanks A and C indicate the quantity of water circulated through the system. The object is to completely replace the water in the piezometer tubes with freshly de-aired water.

The equipment is fully tested before despatch. However, it is possible that movements during transit may disturb the cylinders, pipework or valves sufficiently to cause small leaks when the equipment is operated. If any leaks are observed during operation they should be eliminated by gently tightening the appropriate component.

NEVER modify the arrangement without the full written approval of itmsol as unauthorised modifications may bypass the safety system.

It is advisable to drain water from the equipment during cold weather to prevent damage to the cylinders due to freezing.

WARNING

If an anti-freeze solution is used, the system must be flushed with clean water to prevent the bladder from perishing over time.

WARNING

External high pressure gas cylinders must not be connected to this de-airing unit.

Section 2 : Installation of the De-Airing Unit

The unit is mounted vertically and level on anchor bolts fixed to the instrument house wall, at a convenient height for the operation of all the valves, or stood on a level working surface. Connect the manifolds on the piezometer terminal panels to the busbar tee-piece connections on the de-airing unit. Blank-off the other side of the tee-pieces with the stop-end fittings provided.

WARNING

External high pressure gas cylinders must not be connected to this de-airing unit.

Section 3 : Preparation And Setting Up

The valves must be operated in the order given, commencing with all the valves in the closed position. Please refer to figure 1 of this manual for valve positions.

- 3.1 Attach the vacuum pump with the black hose supplied to valve F. Open valves F, G and N and apply vacuum until the bladder in cylinder B is completely evacuated, on solid cylinders this is indicated by an increase in resistance when operating the vacuum pump.
Close valves F, G and N.
 - 3.2 Immerse one end of the red rubber tube into a container of clean water and attach the other end to valve K. Open valves K and F and operate the vacuum pump drawing the water into cylinder A. When the tank is 90% full, close valves K and F. Remove the vacuum pump from valve F, open valve F to release the vacuum, and then close.
 - 3.3 Prepare de-aired water in the de-aired water boiler, allowing it to cool. (See Section 5 and Figure 1.) Connect valve S on the boiler to valve M using the red rubber hose. Attach the vacuum pump to valve I, open valves I and M and release the vacuum from the boiler by opening valve V on the boiler. Open valve S on the boiler and by operating the vacuum pump slowly draw the de-aired water into cylinder C until it is 90% full. Close all valves.
 - 3.4 Remove the vacuum pump and open valve I to release the vacuum. Open valves G and L, attach the vacuum pump to valve G and draw the de-aired water from cylinder C into cylinder B by operating the vacuum pump until cylinder C is only 10% full. Close all valves. To fill cylinder B completely it is necessary to repeat the operation but this time only half filling cylinder C with de-aired water. When cylinder B is almost full close all valves. Remove the vacuum hose from valve G, open valve G to release the vacuum, and then close.
 - 3.5 Attach the pressure pump to valve E, open valve E and N then operate the pressure pump to bring the pressure in cylinder A to approximately 10mH₂O. Gently open valve G thereby inflating the bladder, displacing the de-aired water in cylinder B and forcing out any remaining air. Any bubbles of air that cling to the rubber bladder and walls of the cylinder B should be dislodged by slapping the sides of the cylinder until they rise and accumulate under valve G. They are then removed by momentarily opening valve G.
- It is important that cylinder B is completely filled with de-aired water and all air excluded. Close all valves and release pressure from cylinder A by removing the pressure pump and opening valve F.
- 3.6 Repeat 3.3 to refill cylinder C.
 - 3.7 Attach the vacuum pump to valve F. Open valves F, L, N and I and apply vacuum to cylinder A. Water is drawn from inside the bladder in cylinder B to cylinder A, thus drawing de-aired water from cylinder C into cylinder B. When the bladder is fully deflated the cylinder A will again be 90% full of water. Close valves F, L, N and I. Remove the vacuum pump from valve F. Open valve F to release vacuum in cylinder A.
 - 3.8 Open valves I and M and drain any remaining water back to the de-aired water boiler. Close all valves. The de-airing unit is now fully charged with de-aired water and ready for operation.

WARNING

If an anti-freeze solution is used, the system must be flushed with clean water to prevent the bladder from perishing over time.

Section 4 : Operating and Recharging

The valves must be operated in the order given, commencing with all valves in the closed position.

- 4.1 Calculate the optimum de-airing pressures (see Section 5), attach the pressure pump to Valve E and the vacuum pump to valve I. Open valve E. Operate the pressure pump until the desired pressure is reached in cylinder A, as indicated by the pressure gauge. If a vacuum is required on the return cylinder C, open valve I and operate the foot vacuum pump until the desired vacuum is reached as indicated by the vacuum gauge.
- 4.2 Open valves N, P and V and appropriate valves on the terminal panel for the selected piezometer to be de-aired, and circulate de-aired water at the calculated pressure through the piezometer tubing, measuring the amount sent on the graduated scale of the pressure cylinder A.

Circulate water until no more air bubbles are seen to be returning through the water in cylinder C finally checking that the volume of water returning to cylinder C corresponds to the volume leaving the de-airing unit. (Volume from cylinder A).

As the de-airing operation proceeds the pressure and vacuum will drop slowly and it will be necessary from time to time to re-adjust these to the original calculated values by operating the foot pumps.

During operation of the unit the bladder in cylinder B should not be allowed to distend to more than 90% of the volume of the cylinder. (Cylinder A level is not lower than 10% full) At this point it is necessary to recharge with de-aired water as follows:

- 4.3 Close all valves.
- 4.4 Disconnect the pressure and vacuum pumps. Open valves F and I to release the pressure and vacuum from the cylinders then close the valves.
- 4.5 Drain water from cylinder C through valve M. Do not return it to the de-airing water boiler.
- 4.6 Connect valve S on the boiler to valve M using the red rubber hose. Attach the vacuum pump to valve I, open valves I and M and release the vacuum from the boiler by opening valve V on the boiler. Open valve S on the boiler and by operating the vacuum pump slowly draw the de-aired water into cylinder C until it is 90% full. Close all valves.
- 4.7 Attach the vacuum pump to valve F. Open valves F, N, L and I and apply vacuum to cylinder A. Water is drawn from inside the bladder in cylinder B to cylinder A, thus drawing de-aired water from cylinder C into cylinder B. When the bladder is fully deflated the cylinder A will again be 90% full of water. Close valves F, N, L and I. Remove the vacuum pump from valve F. Open valve F to release vacuum in cylinder A.
- 4.8 Open valves I and M and drain any remaining water back into the de-airing water boiler. Close all valves. Attach the pressure pump to valve E and the vacuum pump to valve I. The unit is now fully charged with de-aired water and ready for operation

Section 5 : Calculation of De-Airing Pressures for Piezometers

It is important that pressures used to de-air hydraulic piezometers are carefully controlled. If too little pressure is applied the de-airing process will take a long time. If too much pressure is applied there may be a risk of hydro fracturing the soil around the piezometer tip.

The following calculations are used to determine a balanced condition from which the send pressure is increased to generate a steady flow observed in the tubing and in cylinder A.

Consider a piezometer tip in the soil during the de-airing process as follows:-

- u** = pore pressure in the fill at the tip.
- p** = pressure on the pressure side of the de-airing unit.
- v** = pressure on the vacuum side of the de-airing unit.
- h** = difference in head between the piezometer tip and the pressure and vacuum gauges on the de-airing unit.

f_{AB} and

- f_{BC}** = friction losses in the piezometer tubing.


All pressures are measured with respect to atmospheric pressure.

For Equilibrium:-

$$\begin{aligned} p &= h + u + f_{AB} \\ v &= h + u - f_{BC} \end{aligned}$$

Since **AB = BC** and if no water flows in or out of the piezometer tip, the velocity will be the same throughout the system then **f_{AB} = f_{BC}**

$$p = 2(h + u) - v$$

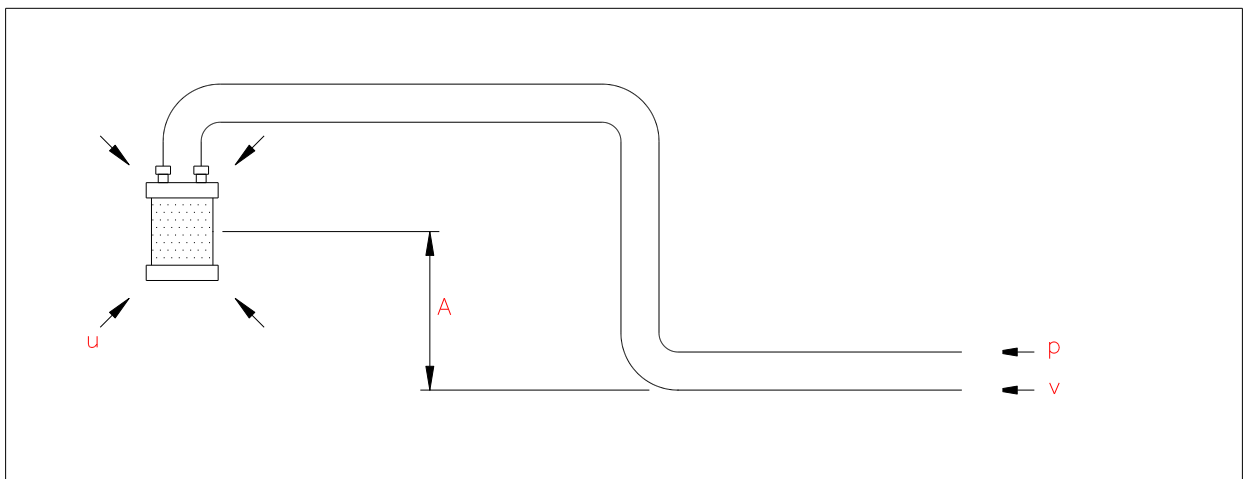


In a piezometer installation h is known, v is maintained at a known value, and u for each piezometer tip is estimated using previous pore pressure readings. In this way p is calculated for each piezometer and de-airing carried out at the appropriate pressure.

If the piezometer lies below the readout point, the term h , the difference in head between the piezometer tip and pressure and vacuum gauges on the de-airing unit, changes sign and becomes negative.

When a piezometer tip has accumulated a lot of air, care should be taken to apply sufficient pressure to drive water at least as far as the tip before applying a vacuum to the other tube, since friction loss in the return tube carrying air is much less than in one carrying water, and air will be drawn in through the piezometer tip from the surrounding fill.

Example 2

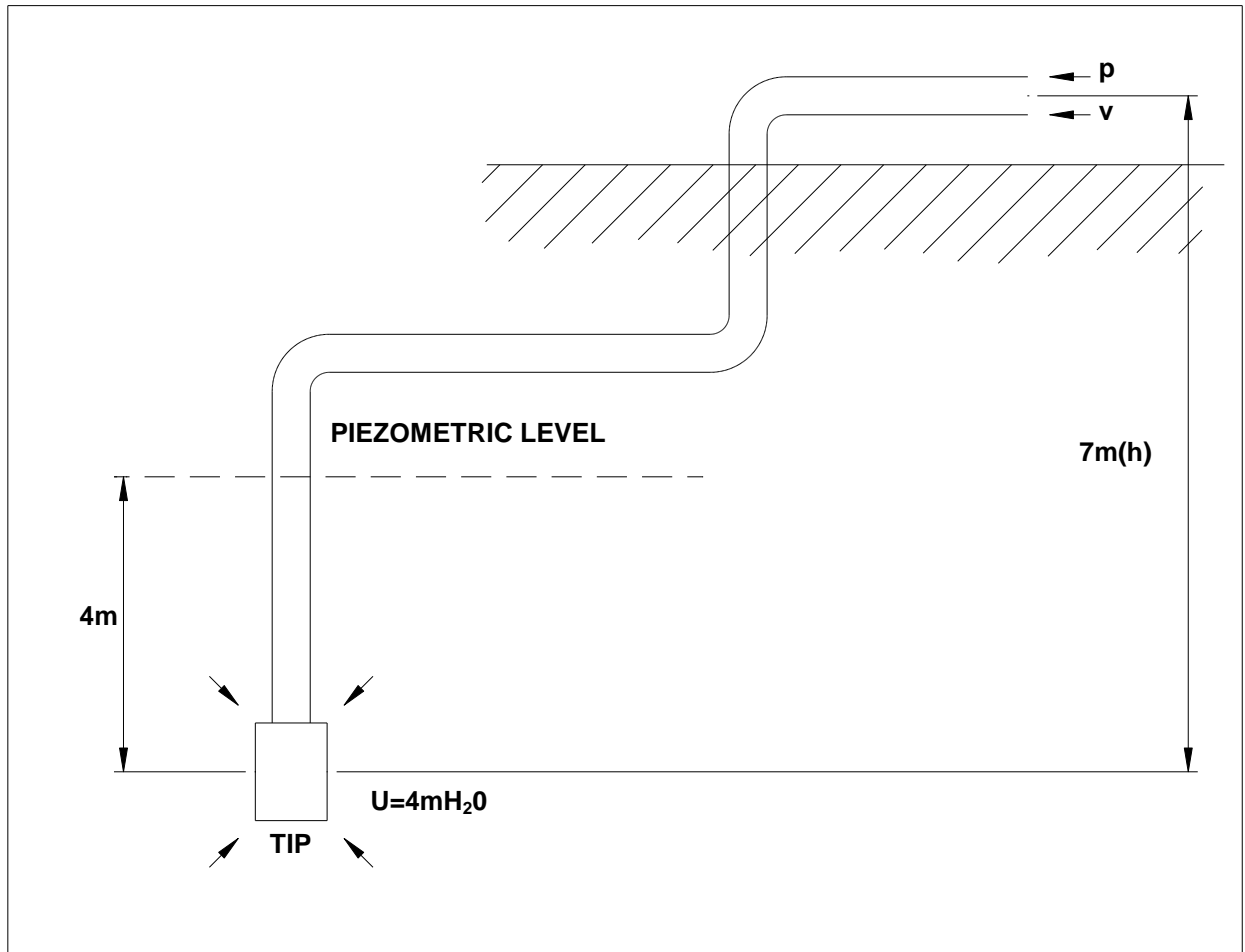

Where $p = 2(h + u) - v$
 $p = 2(-7 + 4) - v$
 $p = -6 - v$

for $v = 0$
 $p = -6 \text{ mH}_2\text{O}$

for $v = -5 \text{ mH}_2\text{O}$
 $p = -1 \text{ mH}_2\text{O}$

for $v = -10 \text{ mH}_2\text{O}$
 $p = 4 \text{ mH}_2\text{O}$

Section 6 : Calculating De-Airing Water Volumes

It is important to determine the volume of de-airing water to be circulated through each hydraulic piezometer.

The amount of de-aired water required depends on the length of piezometer tubing between the installed piezometer tip and the de-airing unit.

Tubing with 2.8mm or 3.8mm internal diameter is usually used.

- 6.1 Calculate from installation layout drawings or physically measure the distance in metres from the installed piezometer tip to the de-airing unit.
- 6.2 Multiply installed length by the appropriate cross sectional area (0.013 for tubing with 2.8mm internal diameter or 0.023 for tubing with 3.8mm internal diameter) to give de-airing water volume in litres.

Add at least 10% to the calculated volume to allow for tubing snaking etc.

Section 7 : The De-Aired Water Boiler

Refer to Figure 2

Up to 50 litres of de-aired water is prepared in the boiler at one filling. A heater coil heats the water to boiling thus expelling any air or gases in solution. By sealing the boiler and allowing it to cool, the steam and water vapour above the water condense thus creating a partial vacuum inside the boiler. This prevents further solution of air or gases.

- 7.1 Open valves V and S. Remove the filler cap.
- 7.2 Fill with clean water to within 100mm of the top.
- 7.3 Connect to a suitable electricity mains supply (either 110V or 230V as indicated on the heater coil cover). Switch on. Bring to the boil and allow to boil for fifteen minutes. Switch off.
- 7.4 Close valves V and S replace the central filler cap. Allow to cool.

WARNING - Although the filler cap is fitted with a pressure relief valve, **NEVER** boil with the filler cap on.

NOTE - With a partial vacuum inside the boiler, **NEVER** open valve S before opening valve V, as this will draw air into the de-aired water.

SAFETY REQUIREMENTS - The 4 psi Pressure Relief Valve in the centre of the filler cap must be checked by a competent person, at intervals not exceeding 12 months.


		
Bell Lane, Uckfield, East Sussex	t: +44 (0) 1825 765044	e: info@itmsoil.com
TN22 1QL United Kingdom	f: +44 (0) 1825 744398	w: www.itmsoil.com
Soil Instruments Ltd. Registered in England. Number: 07960087. Registered Office: 5th Floor, 24 Old Bond Street, London, W1S 4AW		

Figure 1 De-Airing Unit - Schematic


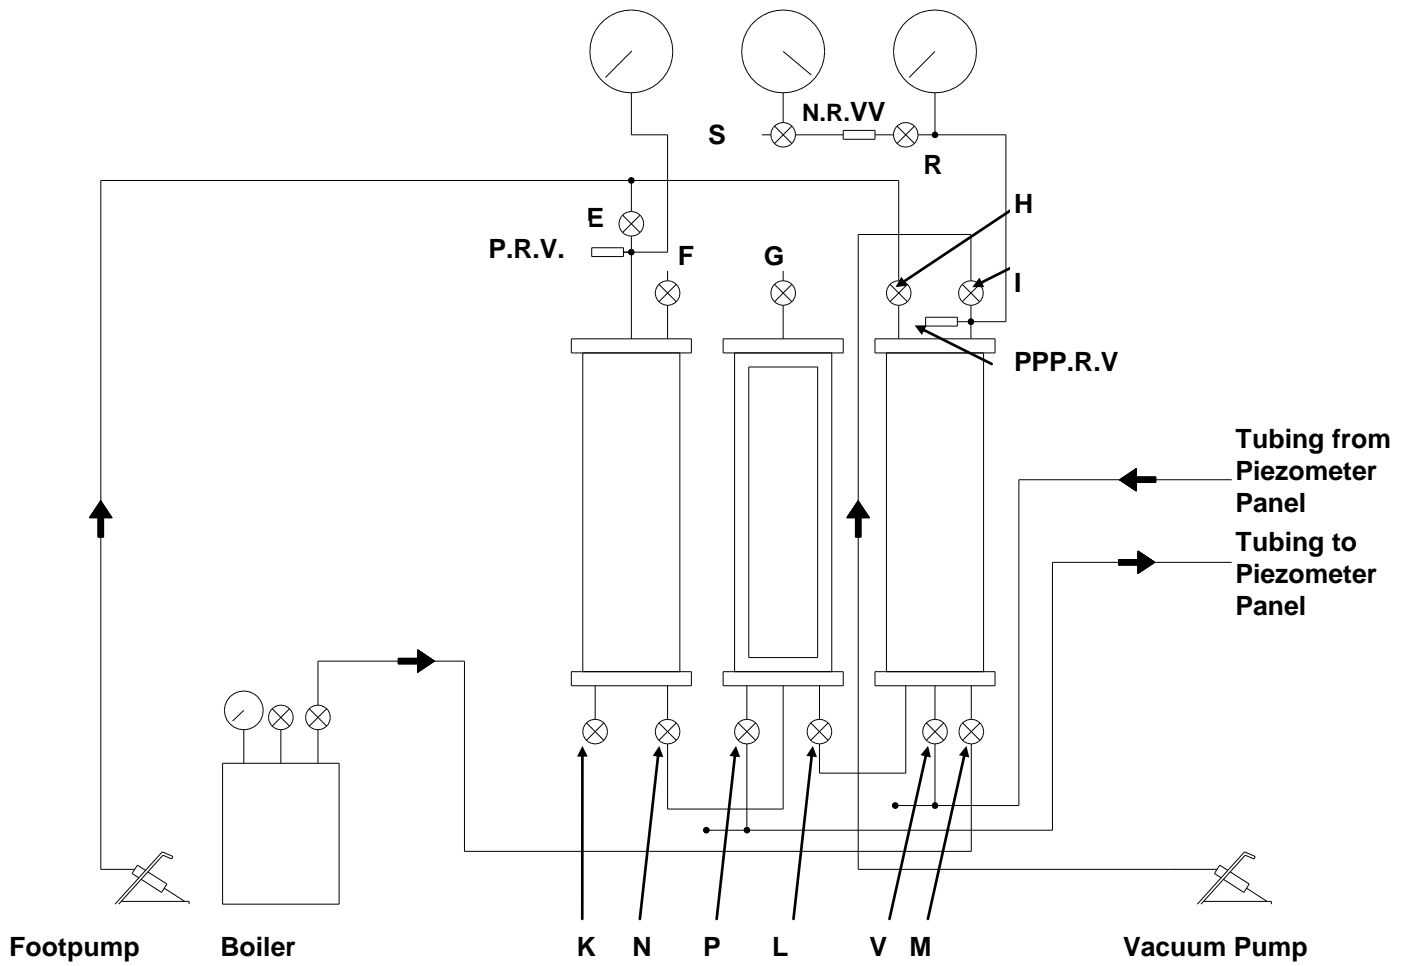


Figure 2 De-Aired Water Boiler

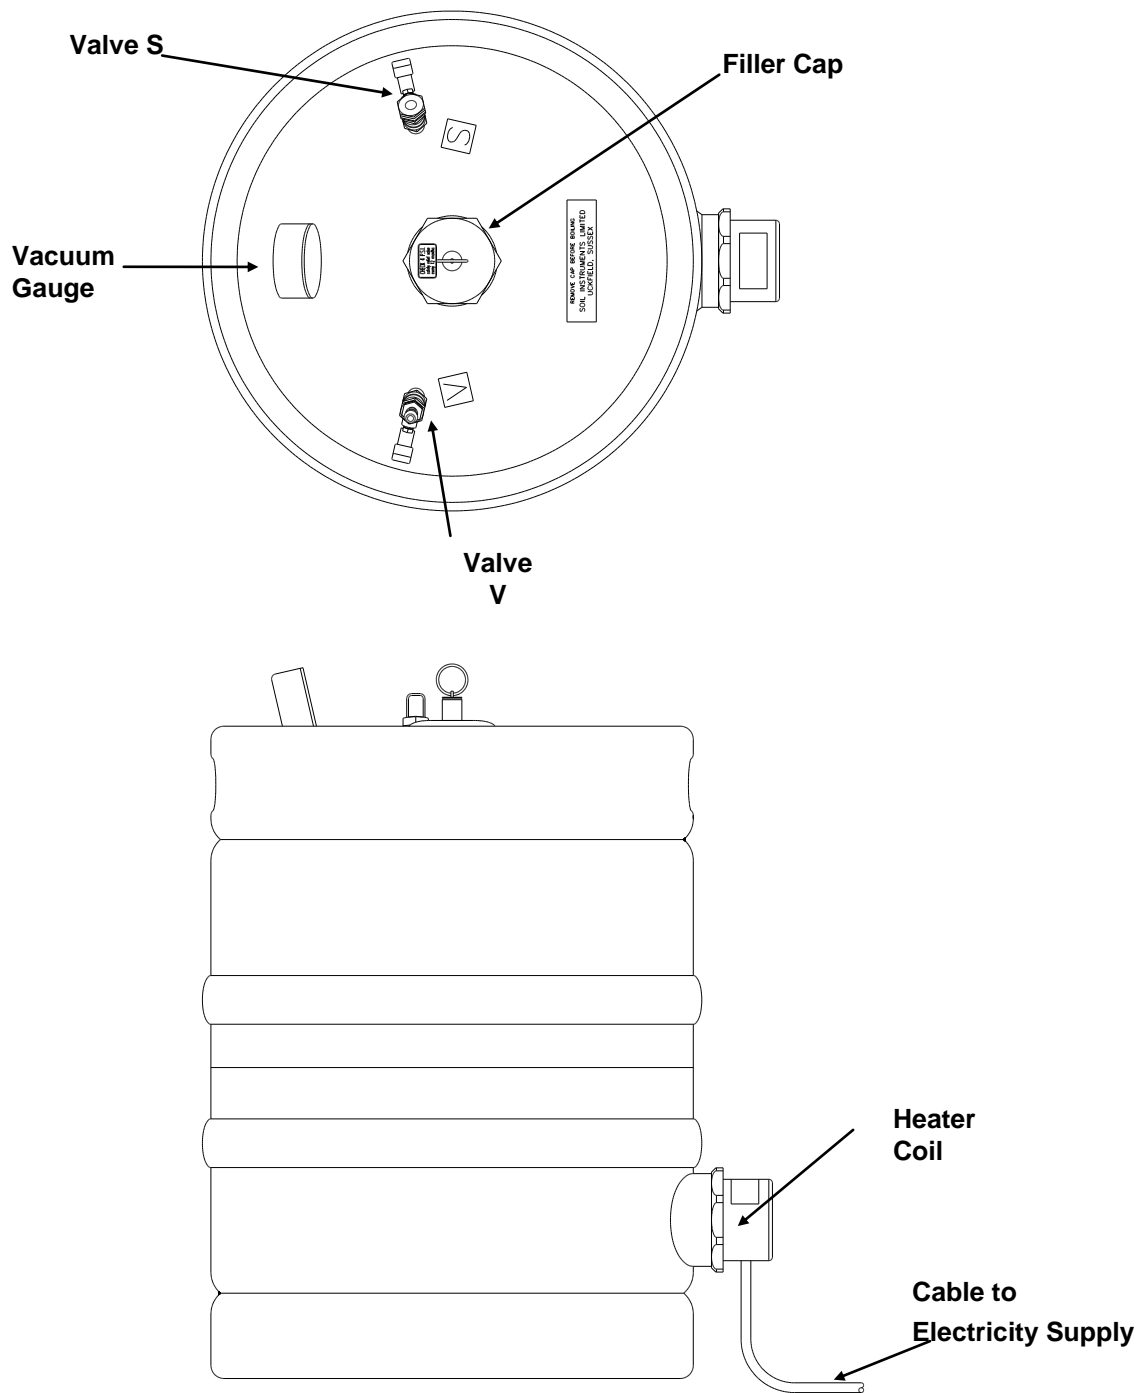

man97-fig2